

Steelcraft

Warranty

Each Steelcraft unit is thoroughly inspected in our Quality Assurance department prior to delivery. In the unlikely case that you find any material or workmanship that affects the units normal operation, we will repair the unit free of charge within 12 months of purchase. You are required to present your receipt as proof of purchase. For all concerns with your product please contact our Customer Service team.

CUSTOMER SERVICE

1300 303 330 - Australia

0508 688 822 - New Zealand

Please read all the information carefully before using this product. This warranty does not apply to failure due to improper care, or normal wear and tear caused by product use. We reserve the right to inspect the unit. You may be charged for repairs if the product has been damaged accidentally.

Distributed by:

AUSTRALIA

BRITAX CHILDCARE PTY.LTD.
A Britax International company.
(Incorporated in Victoria)
A.B.N. 55 006 773 600
99 Derby Road, Sunshine,
Victoria 3020, Australia
Phone: (03) 9288 7288
Fax: (03) 9311 5798

NEW ZEALAND

BRITAX CHILDCARE NZ. Limited.
A Britax International company.
101 Diana Drive, Glenfield,
Auckland 9, New Zealand.
Phone: (09) 443 0102
Fax: (09) 443 0120

 
Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty. Ltd-Australia.
The Britax trademark is the property of Britax Excelsior Limited - UK.
Visit the Britax website at: <http://www.britax.com.au> or email us at custserv@britax.com.au

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

12/06 ©2007 Copyright Britax Childcare Pty. Ltd. Australia.

INSTRUCTION MANUAL

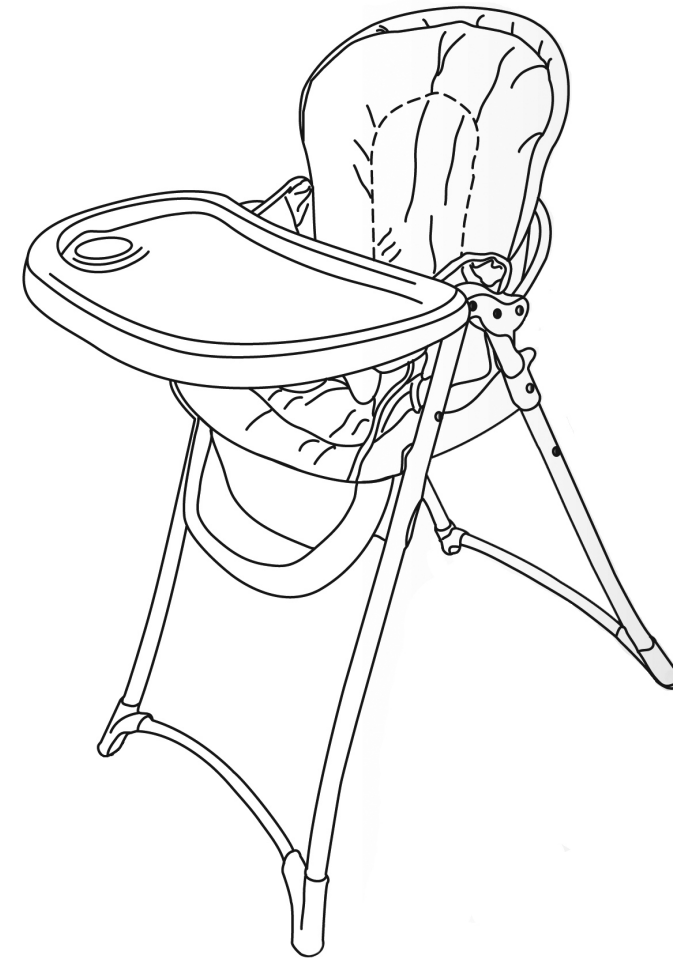

Flat Fold high chair

KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE



READ THESE INSTRUCTIONS CAREFULLY AND KEEP THEM FOR FUTURE REFERENCE. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNING THE CHILD SHOULD BE SECURED IN THE HIGH CHAIR AT ALL TIMES BY THE HARNESS, EITHER IN THE RECLINING OR UPRIGHT POSITION. THE TRAY IS NOT DESIGNED TO HOLD THE CHILD IN THE CHAIR. IT IS RECOMMENDED THAT THE HIGH CHAIR BE USED IN THE UPRIGHT POSITION ONLY BY CHILDREN CAPABLE OF SITTING UPRIGHT UNASSISTED.

WARNING PREVENT SERIOUS INJURY OR DEATH FROM FALLS OR SLIDING OUT. NEVER LEAVE YOUR CHILD UNATTENDED, DIRECT ADULT SUPERVISION IS REQUIRED AT ALL TIMES.

WARNINGS

WARNINGS

- Follow the manufacturer's instructions.
- Always secure child with the harness.
- Use on a flat and firm surface and never use near stairs.
- Do not allow child to stand on the seat.
- Never carry the High Chair with the child in it.
- The weight of the child using this product should not exceed 15kg.
- Always ensure the tray is secure on the armrests, the tray is not designed to hold the child in the chair.
- Do not use the High Chair without the tray.
- Do not use accessories other than those supplied and approved by Steelcraft.
- Discontinue using your High Chair should any part become damaged or broken.
- Double check assembly before placing child into High Chair.
- Always ensure electrical cords, heaters, barbeques, fireplaces and other hot objects are guarded or out of reach.
- Do not store outdoors.
- Always keep your child in view while in the High Chair.
- Always apply the brakes when using the High Chair.
- When making adjustments to the High Chair, ensure that you and your child's body, fingers and toes are clear of any moving parts on the High Chair, otherwise they may be injured.

NOTES





 
CARE AND MAINTENANCE

To prolong the life of your nursery product keep it clean and do not leave it in direct sunlight for extended periods. Trim may be cleaned using a damp sponge with soap or mild detergent. Allow to completely dry preferably away from direct sunlight before storing. In some climates the trims may be affected by mould and mildew. To help prevent this occurring, do not store the product if it is damp or wet. Always store the product in a well ventilated area. To maintain the safety of your nursery product, check regularly and seek prompt repair for bent, torn, worn or broken parts. Use only those parts and accessories approved by Steelcraft. Always check parts regularly for tightness of screws and other fasteners - tighten if required.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.


PARTS LIST

- A 1 x Seat
- B 1 x Tray
- C 2 x Leg Tubes

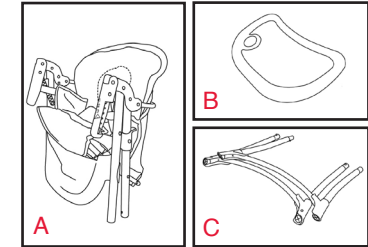

1. ASSEMBLY

 
- A To open the high chair hold the leg tube and pull outward until the rear leg lock, you will hear a click.
- B Insert the front leg tube into the frame until the press buttons lock. Repeat on rear leg.

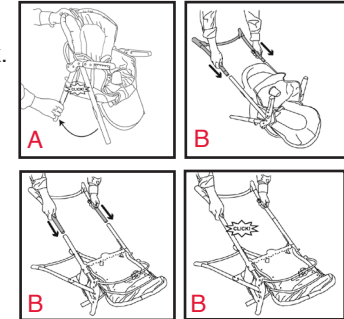

2. TO SECURE YOUR CHILD

WARNING: Use this harness at all times.


 
A five-point harness is provided to restrain your child. To secure the child in the harness, push buckle (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired snug fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom prongs.

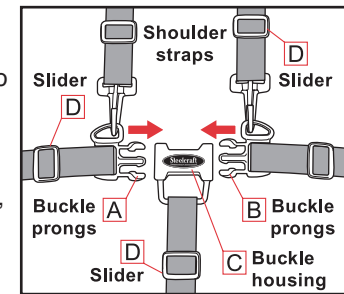



3. TO ATTACH TRAY

  - A Pull both left and right release latches located under tray.
- B Align the tray with arm rests and slide to the desired position. Release latches ensuring it has locked into position. The position of the tray can be adjusted by releasing latches and sliding the tray. To remove release latches and pull tray away from seat.

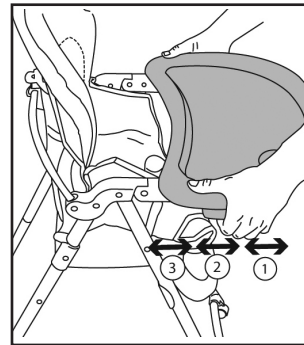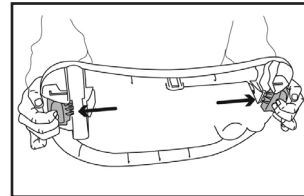


WARNING DO NOT FORCE THE TRAY AGAINST THE CHILD. USE THE THREE ADJUSTABLE POSITIONS. BE SURE BOTH ADJUSTMENT FINGERS ARE ENGAGED TO THE ARMREST.

4. TO RECLINE CHAIR

WARNING! DO NOT ADJUST WITH THE CHILD IN THE CHAIR.

 - A Squeeze back-rest trigger together to adjust back-rest downwards. To elevate squeeze back-rest trigger together and push seat upwards.

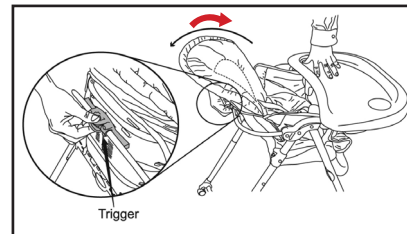

5. TO REMOVE THE CHILD FROM HIGHCHAIR

- A Release tray and remove.
- B Release harness (see section 2) and remove child.

6. TO PLACE CHILD IN HIGHCHAIR

- A Release tray and remove.
- B Place child in seat and secure with harness (see section 2).
- C Slide tray onto armrests.

7. TO FOLD THE HIGH CHAIR

WARNING! DO NOT ADJUST WITH THE CHILD IN THE CHAIR.

- A Pull up on the rear leg release latches. Lift rear of frame and fold forward.

