

Steelcraft[™]

BABY ROCKER WITH TOY BAR



IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE.

www.britax.com.au

Series AX910

WARNINGS

ALWAYS FOLLOW THE MANUFACTURERS INSTRUCTIONS. READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS ROCKER. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

 **WARNING:** THE CHILD SHOULD BE SECURED IN THE ROCKER AT ALL TIMES WITH THE CROTCH STRAP. NEVER USE THE LAP BELT ONLY.

WARNINGS:

- DO NOT LEAVE CHILDREN UNATTENDED, DIRECT ADULT SUPERVISION IS REQUIRED AT ALL TIMES.
- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED SAFETY HARNESS.
- USE THE HARNESS AT ALL TIMES.
- WHEN MAKING ADJUSTMENTS TO THE ROCKER, ALWAYS ENSURE THAT YOUR CHILD'S BODY IS CLEAR OF ANY MOVING PARTS.
- DO NOT USE THIS ROCKER ONCE YOUR CHILD CAN SIT UNAIDED.
- THIS ROCKER IS NOT INTENDED FOR PROLONGED PERIODS OF SLEEPING.
- THIS ROCKER DOES NOT REPLACE A COT OR A BED. SHOULD YOUR CHILD NEED TO SLEEP, THEN IT SHOULD BE PLACED IN A SUITABLE BED OR COT.
- DO NOT USE THE ROCKER ON AN ELEVATED SURFACE, E.G. TABLE.
- USE THE ROCKER ON A FLAT, EVEN AND HORIZONTAL FLOOR AND NEVER USE NEAR STAIRS.
- NEVER USE THE TOY BAR TO CARRY THE ROCKER.
- REMOVE YOUR CHILD FROM THE ROCKER BEFORE MOVING OR TRANSPORTING.

WARNINGS

WARNINGS:

- **DO NOT ALLOW CHILDREN TO USE THE ROCKER AS A TOY OR INTERFERE WITH THE ROCKER WHEN IN USE.**
- **DO NOT LEAVE THE ROCKER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.**
- **DO NOT POSITION THE ROCKER NEAR ANY WINDOW COVERING CORDS, ELECTRICAL CORDS OR ANY OTHER LOOSE CORDS OR CABLES.**
- **DO NOT USE THE ROCKER IF ANY COMPONENTS ARE BROKEN OR MISSING.**
- **DO NOT USE ACCESSORIES OR REPLACEMENT PARTS OTHER THAN THOSE APPROVED BY THE STEELCRAFT.**
- **THE WEIGHT OF THE CHILD USING THIS PRODUCT SHOULD NOT EXCEED 9KG.**




THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

ROCKER ASSEMBLY

OPENING THE ROCKER FRAME

! **WARNING:** ENSURE THAT ALL THE LOCKING DEVICES ARE ENGAGED INTO POSITION BEFORE USE.

A To open the rocker, rotate the bottom rail from the front of the rocker to the back of the rocker until the frame has locked.

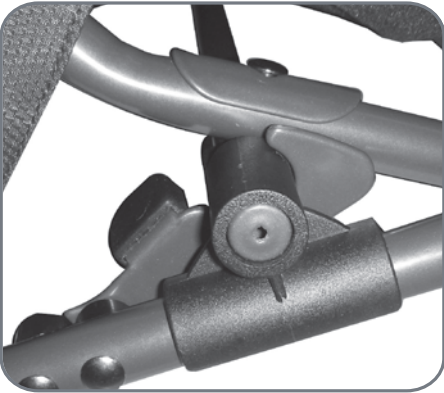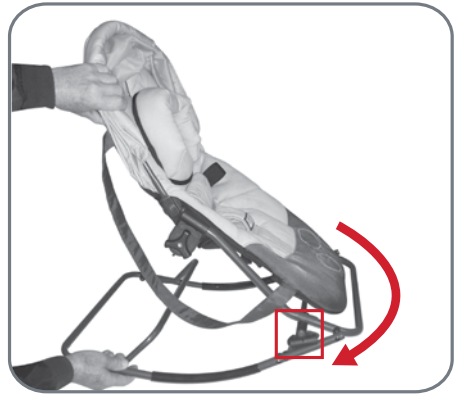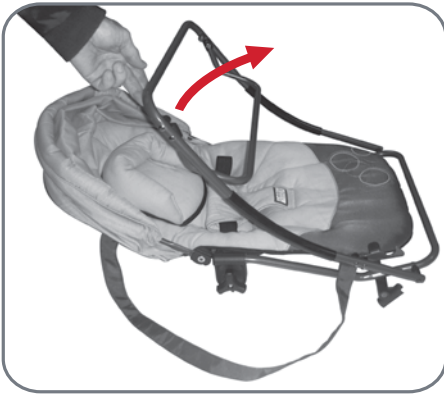

ROCKER ASSEMBLY

ATTACHING THE CANOPY

IMPORTANT NOTE:

The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

- A** To attach the canopy, clip the canopy moulding onto both sides of the rocker frame.



- B** To adjust the canopy, open by pulling forward, or close by pushing backward.




ROCKER ASSEMBLY


ATTACHING THE TOY BAR

 **WARNING:** NEVER USE THE TOY BAR TO LIFT OR CARRY THE ROCKER.

- A Attach the clip on each end of the toy bar to the round part of the canopy frame.
- B To adjust the canopy, open by pulling forward, or close by pushing backward.

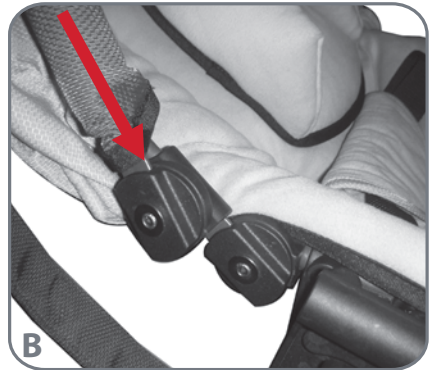

- C To remove the toy bar, push the clip up to the round part of the canopy frame and pull the clip away from the frame.

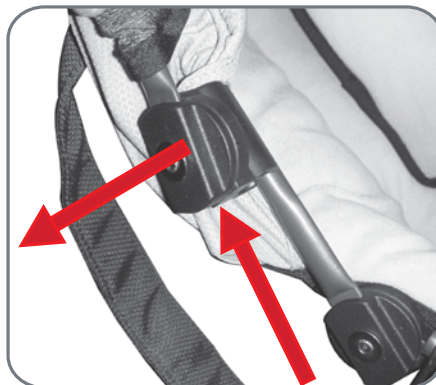

ROCKER ASSEMBLY

ATTACHING THE TOY BAR

- D** Attach toys to the toy bar by fitting the strap located at the top of the bar through the loop on the top of the toy.
- E** Firmly grip the top frame of the toy bar and move to the desired position.




ROCKER OPERATION

USING THE HARNESS

⚠ WARNING: THE CHILD SHOULD BE SECURED IN THE ROCKER AT ALL TIMES WITH THE CROTCH STRAP. NEVER USE LAP BELT ONLY. ADJUST THE LAP BELT TO FIT FIRMLY BUT COMFORTABLY AROUND THE CHILD.

- A** Place the child in the rocker and position the crotch strap between legs. Thread the lap belt buckles through the crotch strap and push buckle (A) into the buckle housing (B) until the buckle prongs snap into position. For the child's comfort, slide the buckle into the crotch strap.

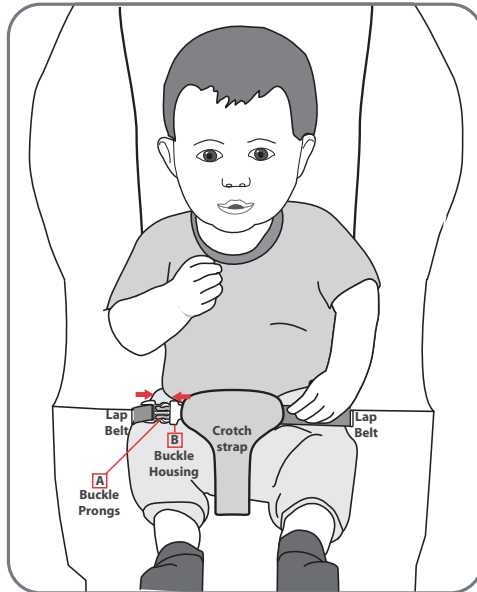


- B** Tighten or loosen the lap belt by feeding and pulling the belt through the back of the buckle prongs. The lap belt needs to fit firmly around the child.

ROCKER OPERATION

USING THE HARNESS

- C** To release the buckle, squeeze the top and bottom buckle prongs with enough pressure so the buckle prongs release from the buckle housing.

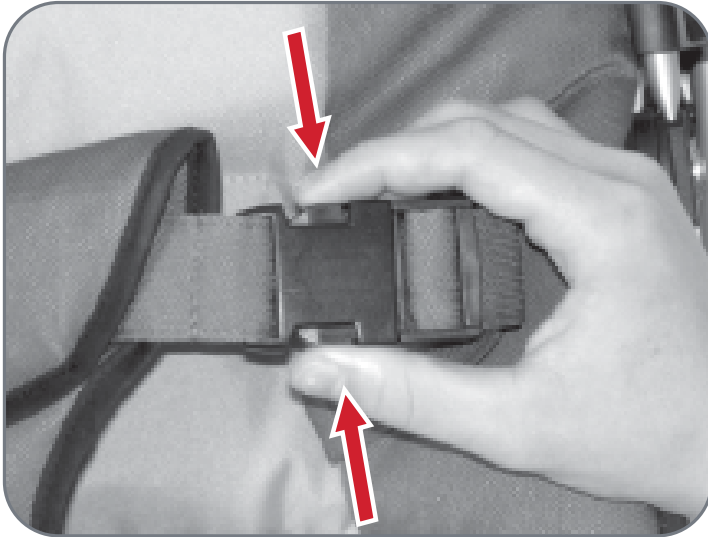


ROCKER OPERATION

USING THE ROCKER IN THE STATIC OR ROCKING MODES

! **WARNING:** REMOVE THE CHILD FROM THE ROCKER BEFORE ADJUSTING THE ROCKER INTO STATIC OR ROCKING MODES.

- A** To set the rocker into a static position, rotate the rear leg stand back.
- B** To set the rocker into the rocking position, rotate the rear leg stand forward.

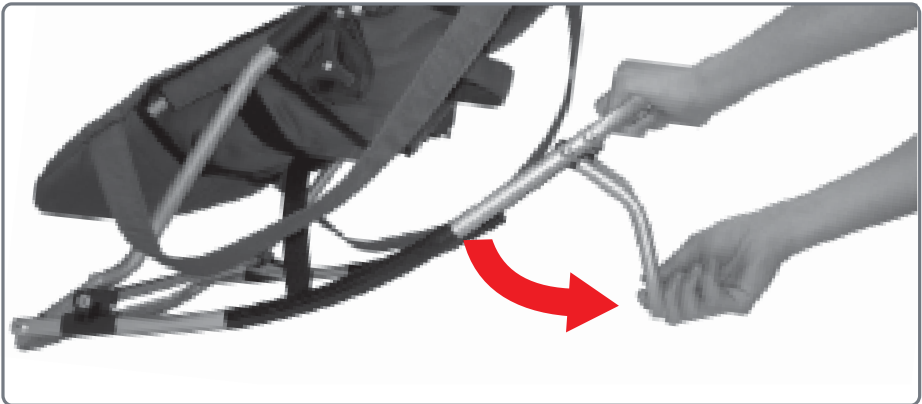

ROCKER OPERATION


ADJUSTING THE SEAT ANGLE

WARNINGS:

- **DO NOT USE THE MOST VERTICAL POSITION.**
- **THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.**
- **REMOVE THE CHILD FROM THE ROCKER BEFORE ADJUSTING THE SEAT POSITION.**
- **NEVER ADJUST THE SEAT WHILE THE ROCKER IS OCCUPIED.**

A Turn the knobs located on both sides of the rocker, one in an anticlockwise direction and the other one in a clockwise direction to unlock the seat. One full turn is sufficient.

B Tilt the seat to the desired position and then turn the knobs in the opposite direction to lock the seat into position.

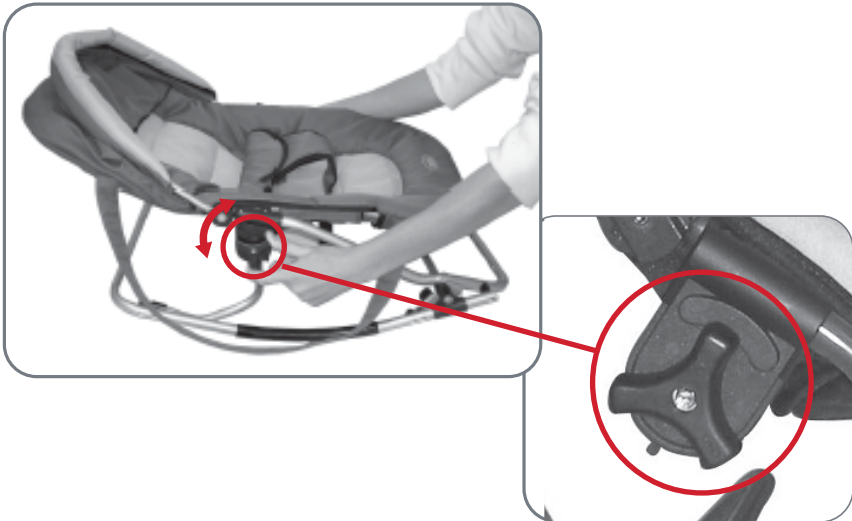

ROCKER OPERATION

ADJUSTING THE SEAT ANGLE

WARNINGS:

- DO NOT USE THE MOST VERTICAL POSITION.



ROCKER OPERATION

FOLDING THE ROCKER



WARNING:

REMOVE THE CHILD FROM THE ROCKER BEFORE COMMENCING ANY FOLDING OPERATION.

- A** For compact storage, fold canopy and toy bar back.
- B** Release the locking catch, and pull the frame apart until bottom rail is fully disengaged.



- C** Rotate the bottom rail to the front of the rocker.



NOTES

CARE AND MAINTENANCE

- To prolong the life of your rocker keep it clean and do not leave it in the direct sunlight for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your rocker at the beach - completely clean your rocker afterwards to remove any sand and salt. Sand and salt will cause premature wear and corrosion.
- To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Steelcraft.
- If the rocker is not working correctly stop using the rocker and seek repair.
- Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

Steelcraft[™]

BRITAX CHILDCARE PTY. LTD A Britax International company.
(Incorporated in Victoria) A.B.N. 55 006 773 600
99 Derby Road, Sunshine, Victoria 3020, Australia
Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE
1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Childcare Holdings Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with the EN12790 standard

2015 Copyright Britax Childcare Pty. Ltd. Australia

www.britax.com.au

Art No. 4001796_B