



Anti-Rebound Bar :

- Anti-Rebound Bar
- Anti-Rebound Bar Cover
- No Tools Required

IMPORTANT: The anti-rebound bar **MUST** be used rear-facing. **DO NOT** use forward-facing.

Installing the Anti-Rebound Bar

1. **Open** the CLICKTIGHT door. **Squeeze** the CLICKTIGHT release buttons underneath the front cover flap and lift to open (Fig. 1).
2. **Insert** the anti-rebound bar into the two openings at the front of the seat (Fig. 2).
3. **Attach** elastic bands from the cover to the hooks on the shell (Fig. 3).
4. **Pull** the anti-rebound bar to ensure it is properly set.

Removing the Anti-Rebound Bar

1. **Open** the CLICKTIGHT door.
2. **Unhook** elastic bands from the front of the seat (Fig. 4).
3. **Push** the inner red button. **Pull** the anti-rebound bar away on one side. Repeat on the other side (Fig. 5).

Cleaning

Sponge clean using warm water and mild soap. Towel dry.

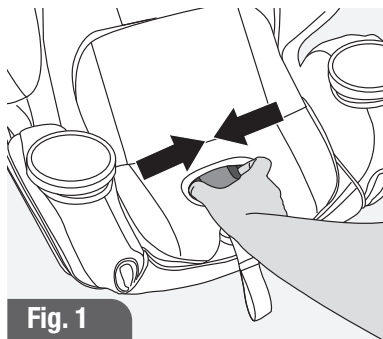


Fig. 1

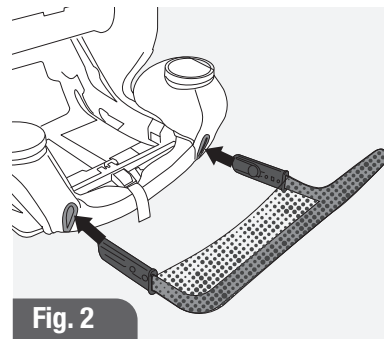


Fig. 2

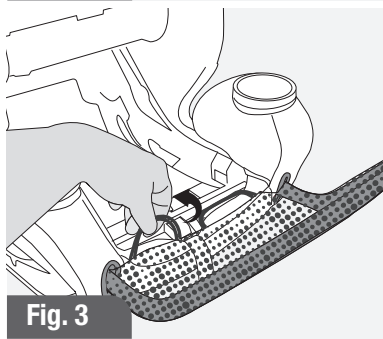


Fig. 3

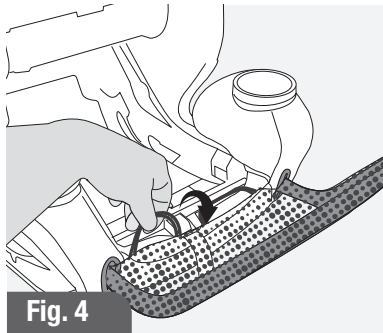


Fig. 4

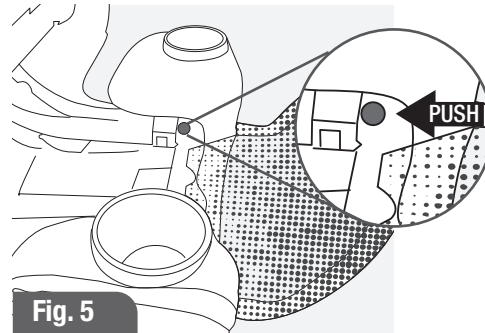


Fig. 5